



## Specifications

- EW-TEMP+HUMID - Internal temperature / humidity sensor
- Powered by 1x CR2032 3VDC coin cell battery (supplied)
- Humidity: RH 0% - 98%
- Temperature: +5°C - +50°C
- Radio frequency: 868MHz
- Distance: 30m through brick walls & floors, 100m line of sight
- LED will flash 3 times on powering up the unit for the first time
- If the test button is held in until the LED comes on & then released, the unit will send through the updated temperature / humidity reading **\*\*Note\*\*** Viewing this reading online through the Cloud Hub will take approximately 3 minutes if you have a good connection to the Cloud (signal strength)
- Test button located on cover for immediate test function to override the check in window of 15 minutes
- Transmits windows: 1 minute or 15 minutes (default is set to 15 minutes). Unit wakes up to transmit data.

## Notes

- Please note: not for use in freezers
- Unit will check in every 15 minutes
- Note the address on the unit starting with @, as this will be required for setup
- This product is intended for use in conjunction with the EW-GSM-CLOUD (Ecowatt Cloud Hub) for monitoring

## Setup

- Once the temperature / humidity monitor is powered up, follow the EW-GSM-CLOUD instructions for online setup.