





## **OPERATION**

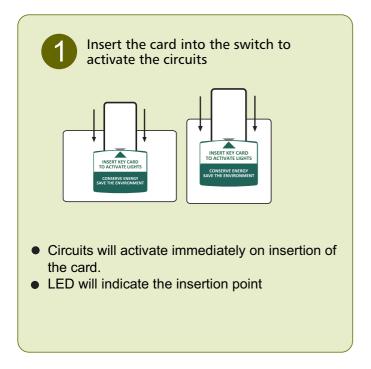

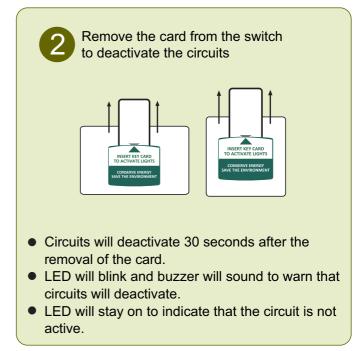

## INSTALLATION

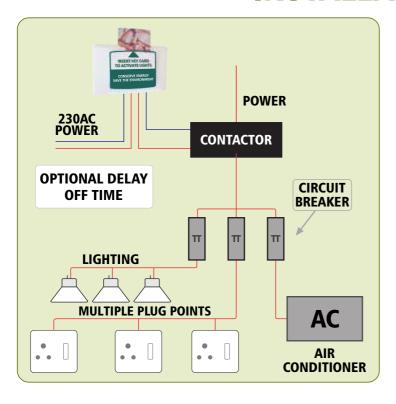

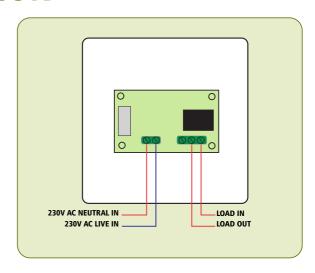

## **NOTE:**

ALWAYS USE EXTERNAL CONTACTOR TO SWITCH LOADS E.G. AIRCON, LIGHTING AND PLUG CIRCUITS.