



OPERATION

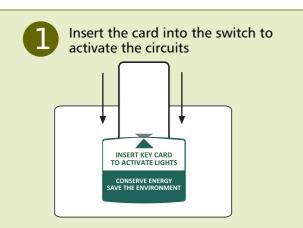



- Circuits will activate immediately on insertion of the card.
- LED will indicate the insertion point

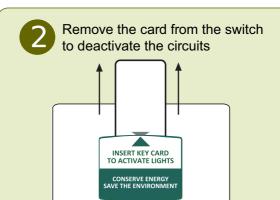

- Circuits will deactivate 30 seconds after the removal of the card.
- LED will blink and buzzer will sound to warn that circuits will deactivate.
- LED will stay on to indicate that the circuit is not active.

INSTALLATION

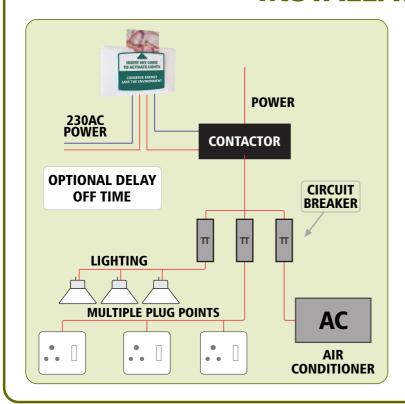

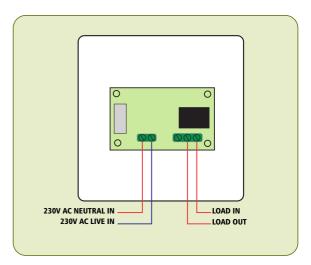

NOTE:

ALWAYS USE EXTERNAL CONTACTOR TO SWITCH LOADS E.G. AIRCON, LIGHTING AND PLUG CIRCUITS.